


## Adjusting Cabinet Doors/Hinges - GRASS Nexis & Soft Close


Close the cabinet door at each step and review your progress. Make gradual corrections. One person can complete these steps, although it is easier with the assistance of another person. If you should have any questions please do not hesitate to ask! We are always more than happy to be of service!

### Vertical Adjustment

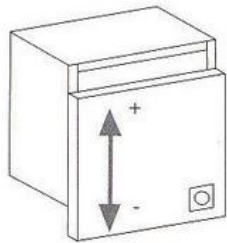


To adjust the hinge upward or downward, loosen the top and bottom screws (shown in picture), push the door up or down as necessary. After adjustments have been made, tighten the screw again. You may need to do this for all the hinges on a door at once.

- Support the door as you loosen these screws or it could drop completely out of its position.

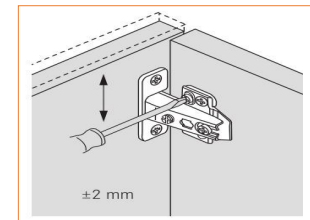


### Horizontal Adjustment

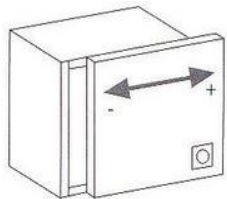


To adjust the hinge side to side, tighten this screw clockwise (shown in picture) to move this corner of the door further toward the frame. To move the door away from the frame, loosen the screw counterclockwise.

- This will correct a door that is not hanging straight. Adjust the top and bottom hinges separately to correct the tilt.

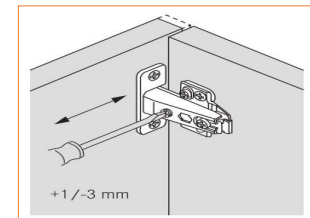


### Depth Adjustment

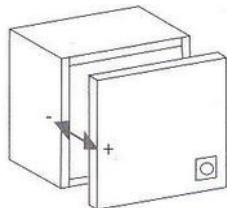

To adjust the hinge inward or outward, loosen this screw and push the door further in or push it further out as necessary.

- Try adjusting the hinges in this direction one at a time. It will help prevent the weight of the door from pulling itself too far out of adjustment

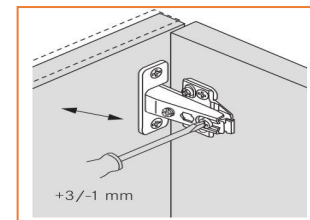

### Soft Close Adjustment

If you added the soft close option to your doors, you can adjust the tension and how slowly/quickly the doors close. Turn the screw clockwise/counter clockwise to achieve desired tension.

**Click here for further directions!**

